



Factory Five Racing, Inc.


Hot Rod

Assembly manual revision 2C update

Table of Contents


Front Suspension Build Up.....	1
4 Link Suspension	2
3-Link	3
Power windows.....	3

Front Suspension Build Up

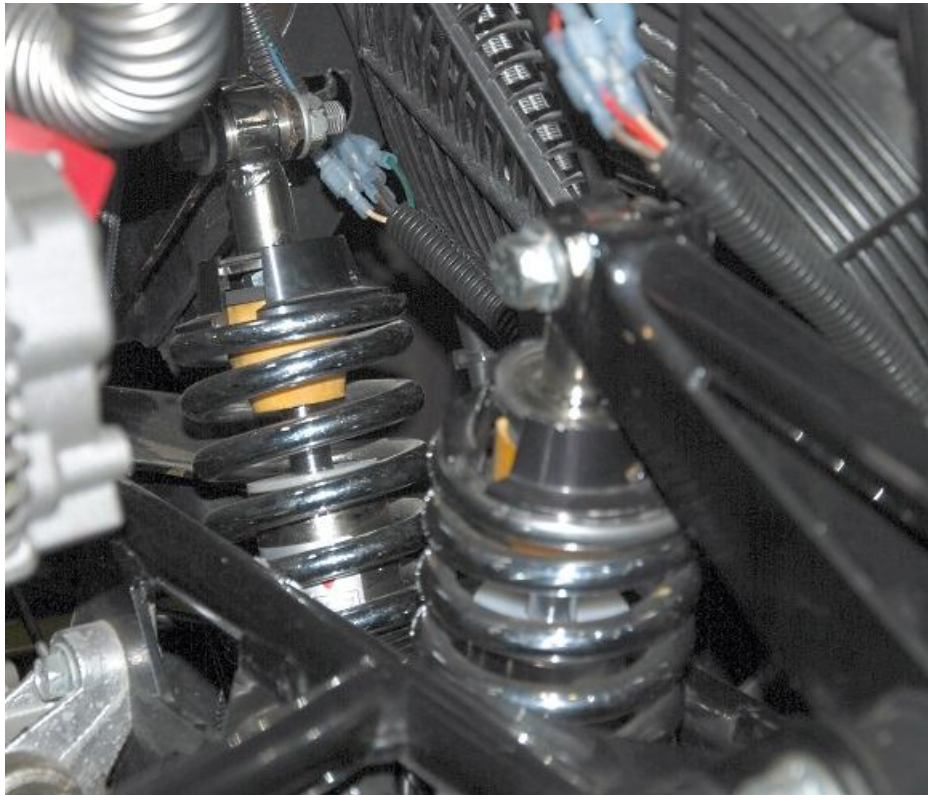

Install the shocks on the chassis with the body down. Use the 0.32” spacers on either side of lower the spherical joint.

4 Link Suspension

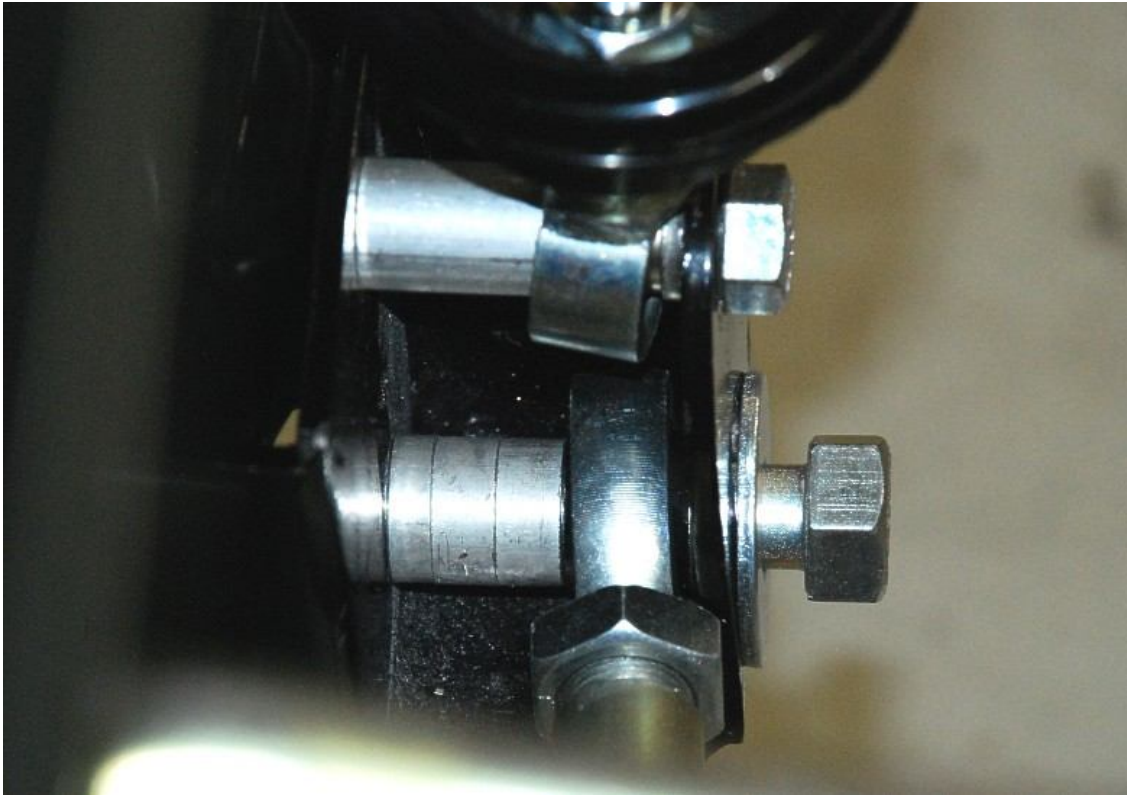

Install the shocks (body down) to the rear axle assembly. Passenger side - The longer spacer (FFR# 33238) is placed at the front of the shock and the smaller 0.125" shim (FFR# 13210) is placed at the rear.

3-Link



Install the shocks (body down) to the rear axle assembly (FFR# 12332 & 10834). The longer spacer (FFR# 33238) is placed at the front of the shock and the smaller 0.125" shim (FFR# 13210) is placed at the rear.

Power windows

- ✎ If the switches do not fit on the flange with the mounting bracket, the switches can be mounted individually and sideways to the flange